


Remote Setup Guidance

This remote control can not only control the AV receiver but has literally thousands of different brands and devices already in its memory. You can change the codes on the remote so that you can operate many different devices in your system.

Instead of having to read through the instruction manual for the instructions to change these codes this new Denon AV receiver has all the codes and instructions in the OSD/GUI (graphic user interface).

Just follow these simple steps

- Select Menu
- Select Manual setup menu
- Select Options
- Select Remote setup guide
- Follow the on screen instructions to set the codes for your system

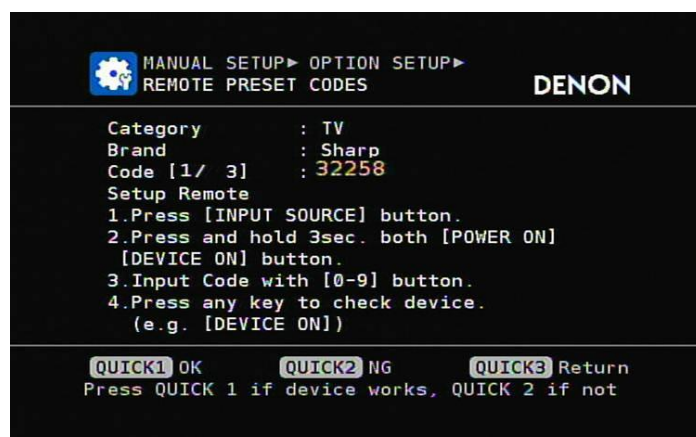

The remote control default settings are;

Input source select button	Category	Brand	Preset code
BD	Blu-ray Disc player	DENON	32258
SAT/CSL	Satellite set top box	DirecTV	01377
TV	Television	SONY	10810
DVD	DVD player	DENON	32134
VAUX	Digital camcorder (DVD recorder)	Panasonic	21378
DOCK*	Control dock for iPod	DENON	72516
GAME1	Cable set top box	Motorola	01376
GAME2	Cable set top box	Scientific Atlanta	01877
CD	CD player	DENON	42867